

Instruction Sheet For Roof Guardian Replacement Filters
Roof Guardian Replacement Kit Includes:

(2-4) Woven Fiberglass Fire Barriers (2-4) Blue Tuff Pads

(2-4)* White Insert w/ One Plastic Side (2-4)* White Quilted Hydrophobic Filter

Pre-Installation

Remove metals rods from existing Roof Guardian or Grease Guard.
Remove any existing filters and all grease buildup.


1) First place the woven fiberglass high-temperature fire barrier



2) Insert blue tuff pads




3) Insert white Inserts with the plastic side face down

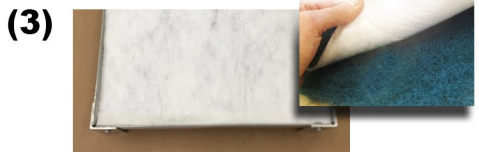

4) Insert quilted hydrophobic filters



5) Insert blue tuff pads

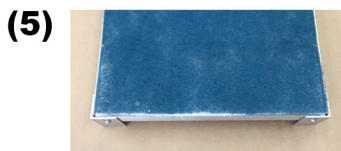

6) Replace Metal Rods



NOTE:

All layers of the Roof Guardian Filter need to cover 100% of the area